

## Quick Installation Guide

### 300Mbps Wireless PoE Router


NC-WR26  
NC-WR27



## I Hardware Connection

### Connecting the Hardware

If your Internet connection is through an Ethernet cable from the wall instead of through a DSL/Cable/Satellite modem, connect the Ethernet cable directly to the router's WAN port.

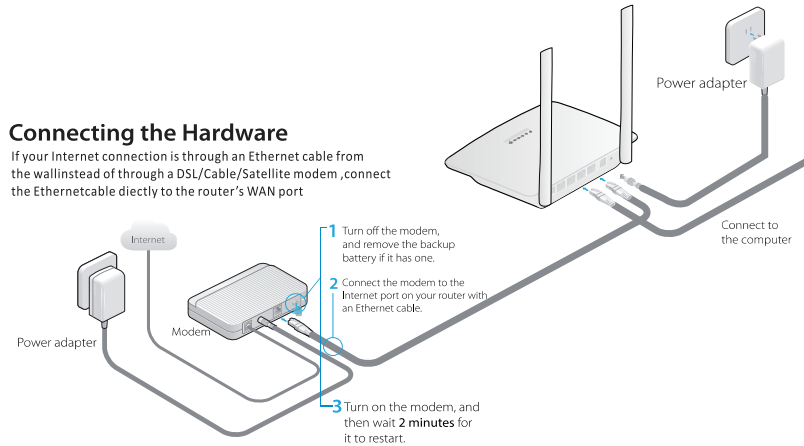


LED	Description
	ON: Power connected
	ON: System is working fine
	ON: Wireless is enabled Flashing: Transferring data by Wi-Fi
	ON: WPS is enabled Flashing: Negotiating key OFF: WPS is disabled
	ON: LAN port connects to device Flashing: LAN port is transferring data OFF: LAN port doesn't connect
	ON: WAN port is well-connected Flashing: WAN port is transferring data OFF: WAN port doesn't connect
Button	Description
WPS/RESET	WPS Function: Press 1~5s Reset: Press more than 20s

Take NC-WR27 for example  
Images herein are for references only.

## II Software Config

### 1. Connect your computer to the router

1st way: Connect computer to LAN3 Port by Ethernet Cable

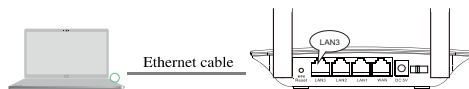

2nd way: Connect SSID(NC-LINK\_XXXXXX,


Password is 66666666) by wireless

### 2. Configure the router using web-browser. Below base on Chrome browser

① Enter <http://192.168.5.1> in the address bar of the web browser.

Enter **admin/admin** for default username and password, and then click "Login".

② Click "System Mode" on the left menu, and select operation mode.

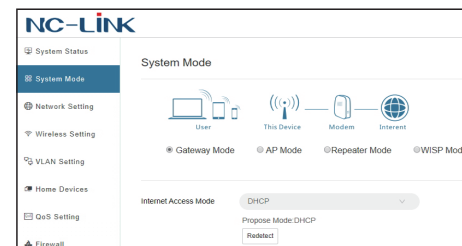

③ Please select **Internet Access Mode**, then enter the PPPoE account or IP address provided by ISP, and Click "Apply".

System Mode

User This Device Modem Internet

Gateway Mode AP Mode Repeater Mode WISP Mode

Internet Access Mode: DHCP

Propose Mode DHCP: Redetect


Host Name: NC-LINK

Apply


④Setup wireless network name and wireless password  
for your local network in "Wireless Setting", and Click "Apply".

Default SSID: NC\_LINK\_XXXXXX

Default Wi-Fi Password: 66666666

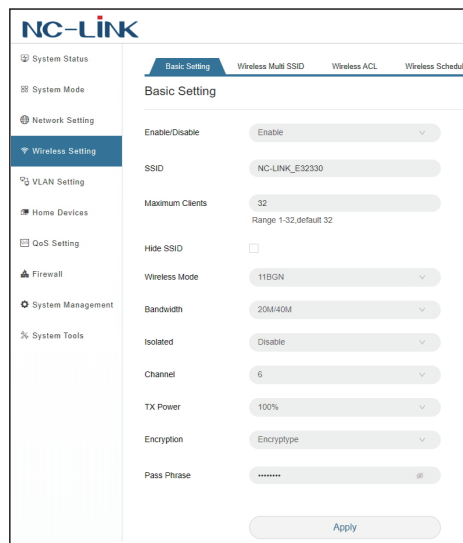

⑤After click "Apply" to save the setting and reboot the router, then finish setup.

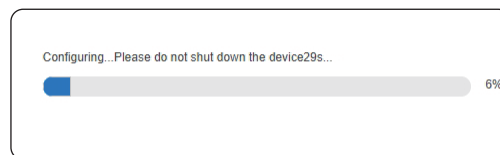

## Warranty Card

### Warranty Period:

Product Series	Warranty Period	Service Method
Main Device	1 year	Customer send it back
External Power Adapter & Antenna	1 year	Customer send it back

www.nc-link.cn

### Warranty Policy:

- 1.The product is considered exchange if found faulty within 14 days of purchase.
- 2.Warranty services support to normally using.
- 3.All the damage caused by man-made (inappropriate preservation, maintain, or theusage), we will not support warrantyservices.
- 4.Once tearing down the barcodes stickers orlosing the warranty card, the warranty serviceexpired immediately.

NC-LINK

Dealer Information	Product Model:	
	Purchase Store:	
	Serial Number:	
User Information	Date of Purchase:	
	Name:	
	Telephone:	
	Zip:	
	E-mail:	

(Keep the Warranty Card for repair)

The final interpretation and modification rights of the WarrantyCard belong to NC-LINK Technology Co., Ltd.

NC-LINK Technology Co.,Ltd.  
Tel: +86755 27217645  
Support E-mail: info@nc-link.cn



## FAQ (Frequently Asked Questions)

### Q1. What can I do if the login window does not appear?

If the computer is set to a static or fixed IP address, change the settings to obtain an IP address automatically. Verify if **http://192.168.5.1** is correctly entered in the web browser and press Enter. Use another web browser and try again. Like IE Explorer. Reboot your router and try again. Disable the network adapter used currently and then enable it again.

### Q2. What can I do if I cannot access the Internet?

Check if the Internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, contact your Internet Service Provider. Open a web browser, enter **http://192.168.5.1** and run the setup again. Reboot your router and try again. Note: For cable modem users, reboot the modem first. If the problem still exists, log in to the Web Management page of the router, and go to **Network Setting > WAN Setting > Clone MAC Address**, and then click **Save**.

### Q3. How do I restore the router to its factory default settings?

**Method 1:** While the router is powered on, press and hold the WPS/RESET button on the rear panel of the router for approximately **30~35 seconds**. **Method 2:** Log in to the Web Management page of the router, and go to **System Management > Reset > Factory Reset**

### Q4. What can I do if I forget my web management page password?

Refer to FAQ > Q3 to reset the router, and then use the default " **admin** " for password to log in.

### Q5. What can I do if I forget my wireless network password?

If you have not changed the default Wireless Password, the wireless password is **66666666**.

If you have changed your password, log in to the router's Web Management page, goto **Wireless Setting > Pass Phrase** to obtain or reset your password.

NC-LINK TECHNOLOGY LIMITED



Website: [www.nc-link.cn](http://www.nc-link.cn)

Support E-mail: [info@nc-link.cn](mailto:info@nc-link.cn)